

AVシステムの使い方 (システム概要)

システム全景




映像ケーブル

HDMI1




HDMIケーブル (赤)

HDMI2

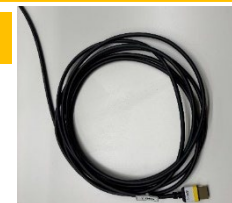

HDMIケーブル (黄)

音声入力

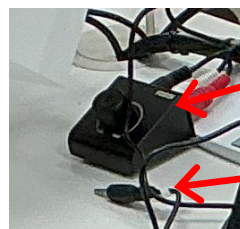


入力音声
ボリューム

音声入力端子

アナログの音声を入力できます。音量の調整は操作パネルに関係せず独立してボリュームで操作できます。

操作パネル

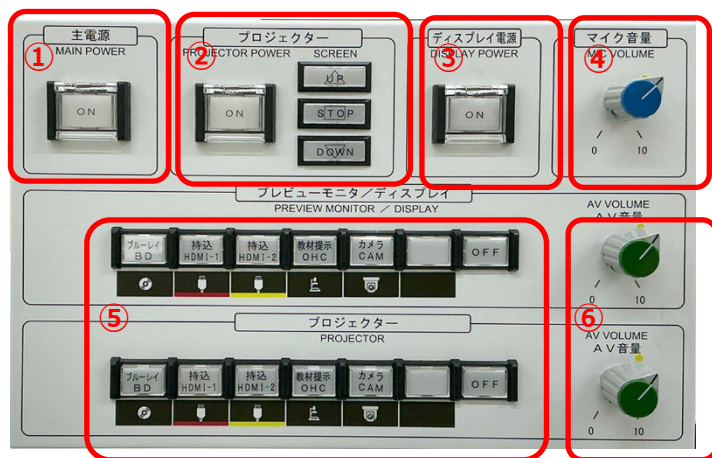

①主電源

システムの電源の入り切りができます。ONにするとマイクが使えます。

②プロジェクター電源

プロジェクターの電源の入り切りができます。スクリーンの昇降、停止ができます。

③ディスプレイ電源

ディスプレイの電源の入り切りができます。

④マイク音量

マイクの音量が調整できます。

⑤ソース切替え

それぞれ投影するソースを選択できます。

⑥AV音量

各ディスプレイ、プロジェクターの音量が調整できます。

書画カメラ

ズーム操作部



AVシステムの使い方（操作手順）

① 利用開始

・操作パネルの主電源「ON」ボタンを押してください。

システムが起動し
マイクが使えます。



② 表示装置の準備（プロジェクター・ディスプレイ）

・プロジェクター・ディスプレイの電源を入れてください。



プロジェクターを使用する場合は
スクリーンスイッチを操作

※周辺の安全を確認し
スクリーンスイッチDOWNボタンを押して
スクリーンを下げてください。

③ 素材の準備 素材機器の準備をしてください。

ブルーレイデッキ



操作はリモコンで行います。

ブルーレイディスクのほか
DVD、CDの再生も可能です。

持込機器

・持込機器にあったケーブルを接続します。

HDMI1
(HDMIケーブル)




HDMI2
(HDMIケーブル)




接続し、④の操作で選択しても映像が表示されない場合
パソコンの表示設定で画面複製や拡張モードにしてください。
[Fn]キー + F*キー（キーボード上段の□キー）を複数回
押すことでも同様の操作が可能です。

書画カメラ

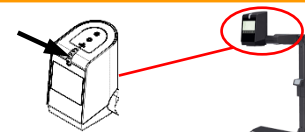


カメラ部の
「ズーム操作部」でズーム調整をします。
フォーカスの調整は、自動ですが、
画面の「AF」アイコンを押すと再調整できます。

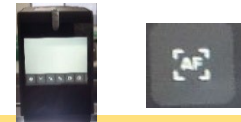

④ 素材の選択

・投影素材選択ボタンより、素材を選択してください。

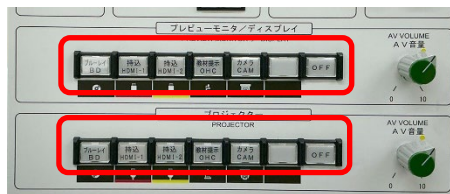

⑤ 利用の終了


・以下を確認後、主電源ボタン（①参照）を押し点滅・消灯状態にしてください。

ご注意

ディスクや持込機器の
お取り忘れ

お願い


ケーブルを所定の位置へ
お戻しください

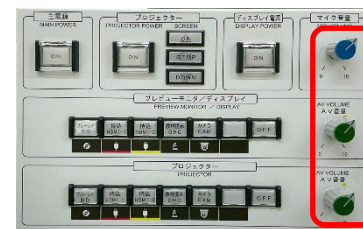

・それぞれの音をボリューム調整できます。


システムの電源が切れて、操作パネルの主電源ボタンが消灯したら終了です。

AVシステムの使い方（教卓カメラの使用方法）

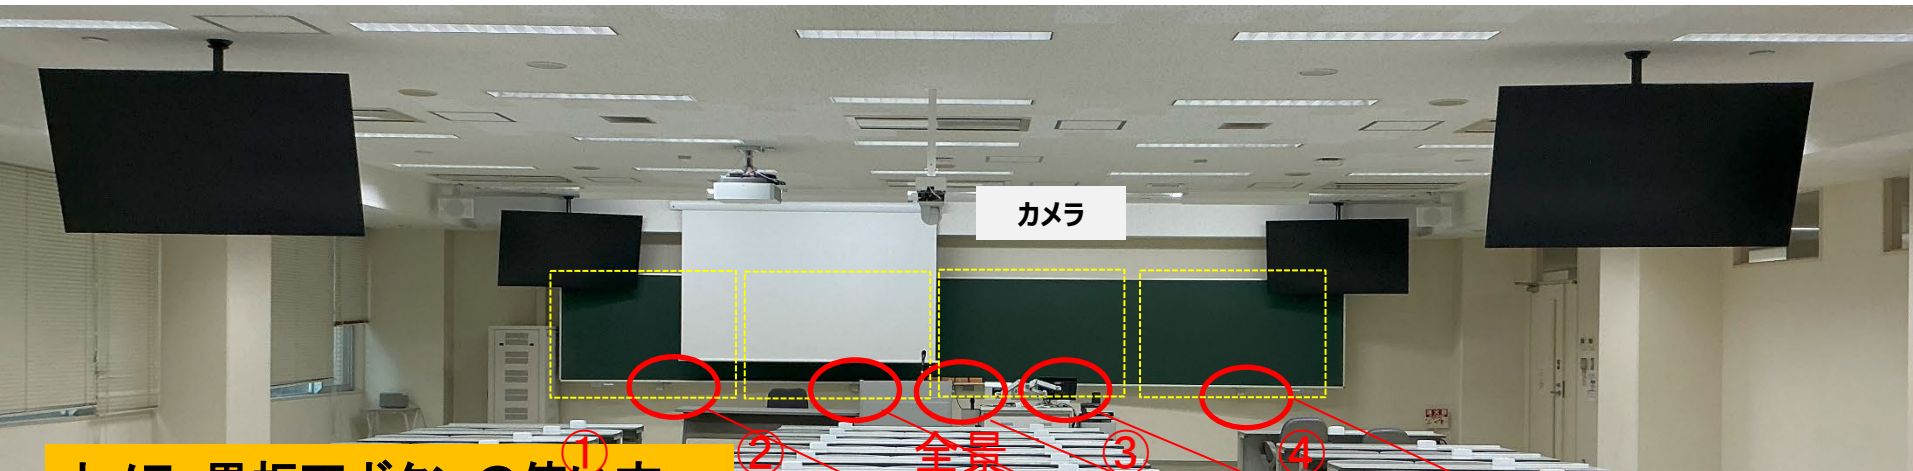

カメラ・黒板下ボタンの使い方

操作パネルで「カメラ」を選択してください。
アングルは黒板下のボタン、または、リモコンで操作してください。

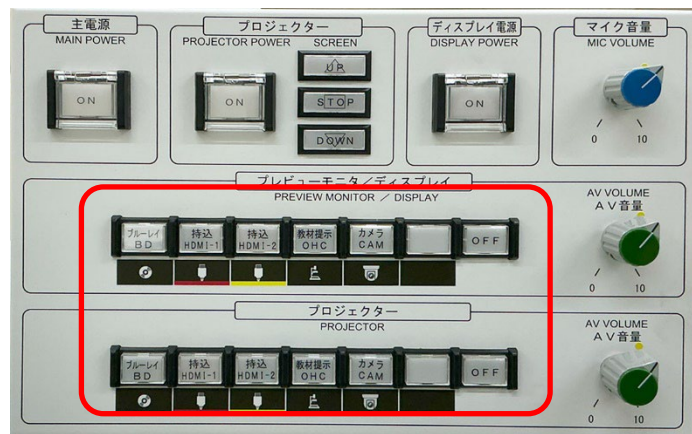


- ・上図の丸印部**5カ所**にボタンがあります。
- ・黒板を**4分割**し画面を表示できます。

How to Use the AV System (Overview)

*When trouble occurs, the facility control room
Call extension 7902 (077-561-2921).

System overview

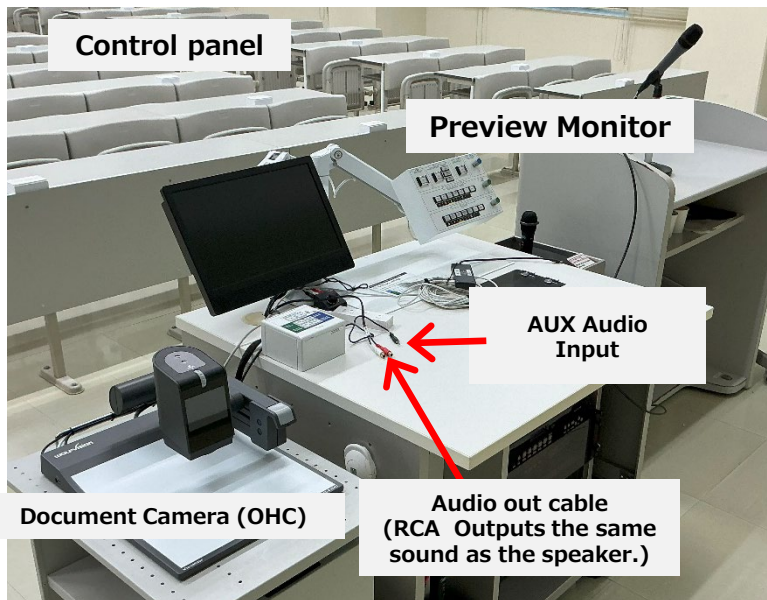

Video cable

HDMI1




HDMI Cable (RED)

HDMI2



HDMI Cable (YELLOW)

AUX Audio

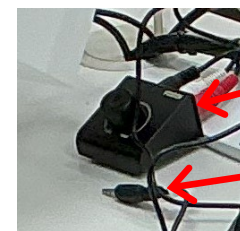


AUX Audio Volume

AUX Audio Input

You can input analog audio. Volume can be adjusted independently of the operation panel.

Control panel

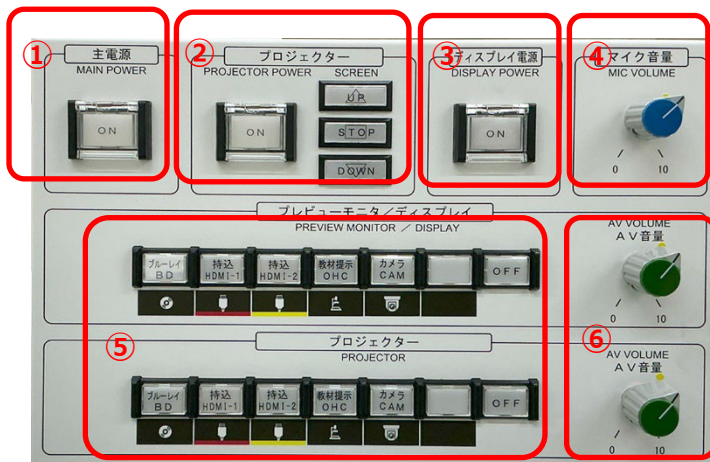

① MAIN POWER

Turn the main power ON / OFF. You can use the microphone just by turning on the system.

② PROJECTOR POWER

Turn the Projector power ON / OFF.

③ DISPLAY POWER

Turn the display power ON / OFF.

Screen lift button

Operate with "UP", "STOP", "DOWN"

④ Microphone volume

Adjusts the microphone volume.

⑤ Projection Material

Display / Projector video selection.

⑥ AV VOLUME

Adjust the AV volume with the video selection on the display.

OHC

Zoom SW



How to Use the AV System (Procedure)

① Use starting of audio visual equipment

• Press the **MAIN POWER** button.

The system will boot up and you will be able to use the microphone.



② Powering on display devices (projector, display)

• Press the **PROJECTOR POWER / DISPLAY POWER** button.




When using a projector, operate the Screen lift button.

***Make sure the area around the screen is safe and press the DOWN button to lower the screen.**

③ Preparing the image output device

Blu-ray Disc player

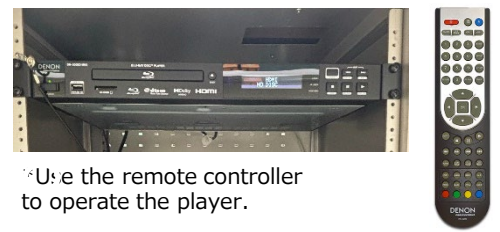

*Use the remote controller to operate the player.

It can play DVDs and CDs as well as Blu-ray discs.

Bring-in device ex PC


• Connect the appropriate cable for the device.

HDMI1




HDMI2



If the image is not displayed after connecting and selecting the device in step (4), set the computer's display settings to screen duplication or extended mode. The same operation can be performed by pressing the "Fn" key + F* key ( key at the top of the keyboard) multiple times.

Document Camera (OHC)

① Press the lamp button on the top of the camera to turn on the light.

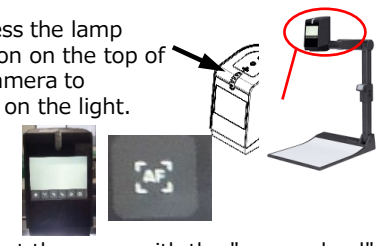


② Adjust the zoom with the "zoom wheel" of the camera section.
③ Touch the [AF] button on the touch panel to adjust the focus automatically.

④ Selecting the Projection Material

• Press the **"Projection Material"** button to select a material.

*You can project different materials on the projector and display.

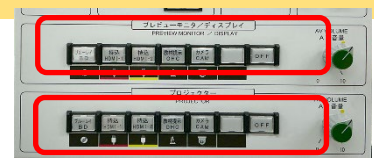

• **AV Volume**

⑤ End of use


When the system power turns off and the main power button turns off, you are done.

• After confirming the following, press the main power button.

Caution Don't forget to pick up your disks, tapes, and equipment.


Please Put the wireless microphone on the charger. Put the cable back in place.

How to Use the AV System (CAMERA)

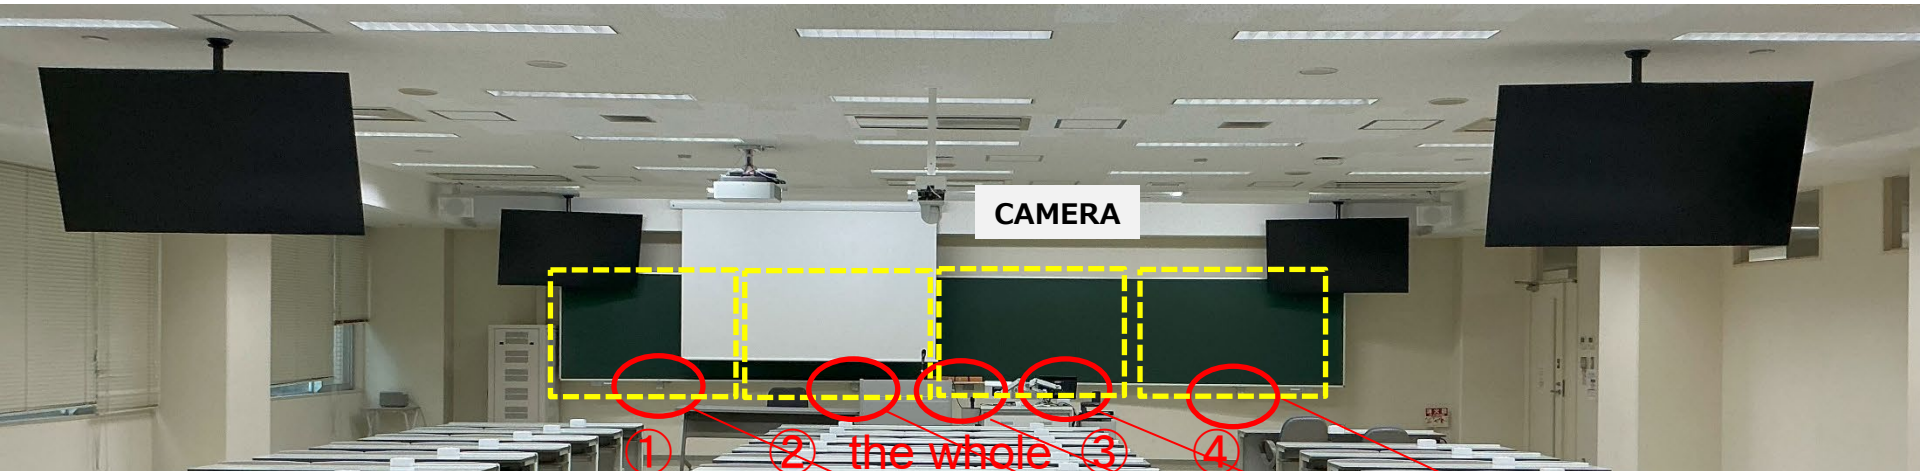


Use Camera

Press **CAM** button
Select CAM of PREVIEW MONITOR / DISPLAY and PROJECTOR
on Control panel.

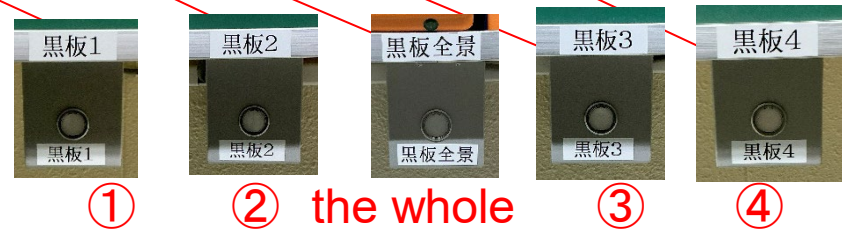

① ② the whole ③ ④
blackboard

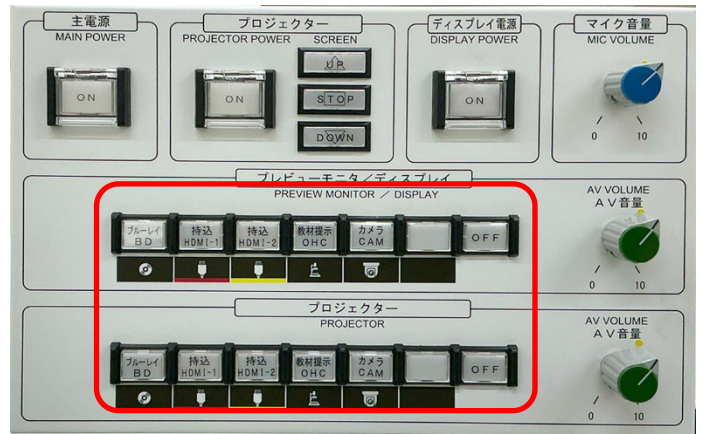

• There are 5 buttons under the blackboard.
• You can divide the blackboard into 4 sections.